

 
Sierra Grill Chimenea XL

User Instructions

56016XLZ



Tools required (not included)



These instructions form part of this appliance. Please be sure to read them before use and keep for future reference. This product is for domestic use only and should not be used commercially or for contract purposes.

Produced in PRC for La Hacienda Ltd
Hangar 27, Site C, Aston Down Airfield, Nr Stroud, Glos, GL6 8HR, UK
www.lahacienda.co.uk

56016XLZ_Sierra_XL_Chimenea_SCC_IM_1.5



Care and safe use guidelines

SAFETY INFORMATION

WARNINGS:

- Product labels and warnings affixed with adhesive or other permanent means must never be removed; doing so will invalidate the product's regulatory compliance and its warranty.
- To prevent damage or surface cracking, do not drop this appliance.
- Do not overload with fuel (untreated wood or logs); if the fire is too intense this could damage the appliance. Fuel should never protrude from the mouth of the appliance.
- This appliance will become very hot in use, do not move it during operation.
- Do not use this appliance in a confined and/or habitable space e.g. houses, tents, caravans, motor homes or boats. Danger of carbon monoxide poisoning fatality.
- Keep children and pets away.
- Do not use this appliance as a furnace.

FIRE HAZARD:

- This appliance must be installed on a secure level base before use.
- Do not use this appliance on wooden decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark, etc.
- Do not use this appliance on artificial grass or other surfaces that are not heat resistant.
- Hot embers may be emitted whilst in use.
- Ensure that this appliance is positioned at least 2 meters away from any flammable materials and has a minimum clearance of 2 metres from overhead and adjacent surroundings.
- Never leave a hot or burning fire unattended.

CARE & USE

- When lifting or moving this appliance, never drag it; seek assistance as necessary.
- As this appliance has components made from steel and/or cast iron, the surface will age and develop surface rust over time once it is exposed to natural weather elements. This is to be expected and does not constitute an appliance fault.
- Never fuel the fire to an extent that flames reach the flue of this appliance.
- This appliance must never be used with the lid fitted (if supplied).
- For safety reasons, it is recommended to inspect this appliance before each use for signs of fatigue and damage. Be sure to replace any appliance that has reached the end of its natural life.
- If this appliance is left outside temporarily a suitable cover must be used, once it has cooled completely.
- For long-term storage this appliance must be stored in an environment that is free from frost, rain and excessive moisture.
- This appliance could mark or stain a patio; to protect against this place onto a separate patio slab or brick base.
- The cooking grill should be cleaned with a solution of washing up liquid in warm water. It is not suitable for cleaning in a dishwasher.

SOLID FUEL TYPES & LEVELS

- For outdoor heating, the following fuel types may be used with this appliance: untreated wood, logs and Easylogs.
- For cooking food, it is essential to use lumpwood charcoal.
- Do not burn coal in this appliance.
- Do not overload with fuel: it is recommended to fill only to half capacity of the fire bowl or fuel burning area.
- The recommended quantity of fuel must never be exceeded by greater than 50%.


LIGHTING, REFUELLING & EXTINGUISHING

- **WARNING!** Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3.
- Prepare a stack of loosely crumpled newspaper or eco firelighters (or compatible, tested to EN 1860-3) into the fuel-burning area.
- Pile finely split, dry, firewood on top of the paper.
- Add half of the fuel leaving access to light the paper.
- Light the paper or firelighters using long safety matches or a long-reach lighter. Once the fire is established add the remaining fuel.
- Always use heat resistant gloves, tested to EN 407, when adding fuel, or when using any safety tool (where supplied).
- Do not drop or throw fuel into the appliance as this can cause cracks/fractures to the appliance.
- To extinguish the fire after use: stop adding fuel and allow the fire to die; alternatively douse it with sand. Do not use water as this may damage the appliance, and will also create excess ash particles.

FOOD COOKING


- **CAUTION:** eating raw or under-cooked meat can cause food poisoning
- It is recommended that this appliance is heated up and the fuel kept red hot for 30 minutes before cooking for the first time.
- Do not cook before the fuel has a coating of ash
- Always wash your hands before and after handling uncooked meat and before eating.
- Keep raw meat away from cooked meat and other foods.
- Do not use the same utensils to handle cooked and uncooked foods.
- Ensure all meat is cooked thoroughly before eating.

Parts List

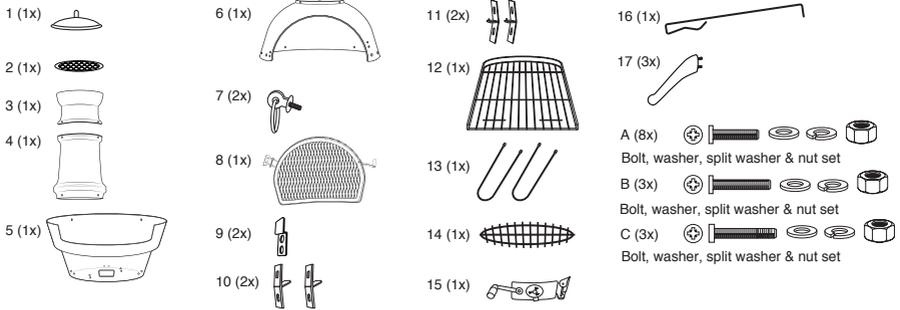

Prior to assembly, read the instructions carefully. Check all parts against this parts list. Carry out assembly on a soft surface to avoid scratching the paint. Please retain this information for future reference.

Assembly Diagrams

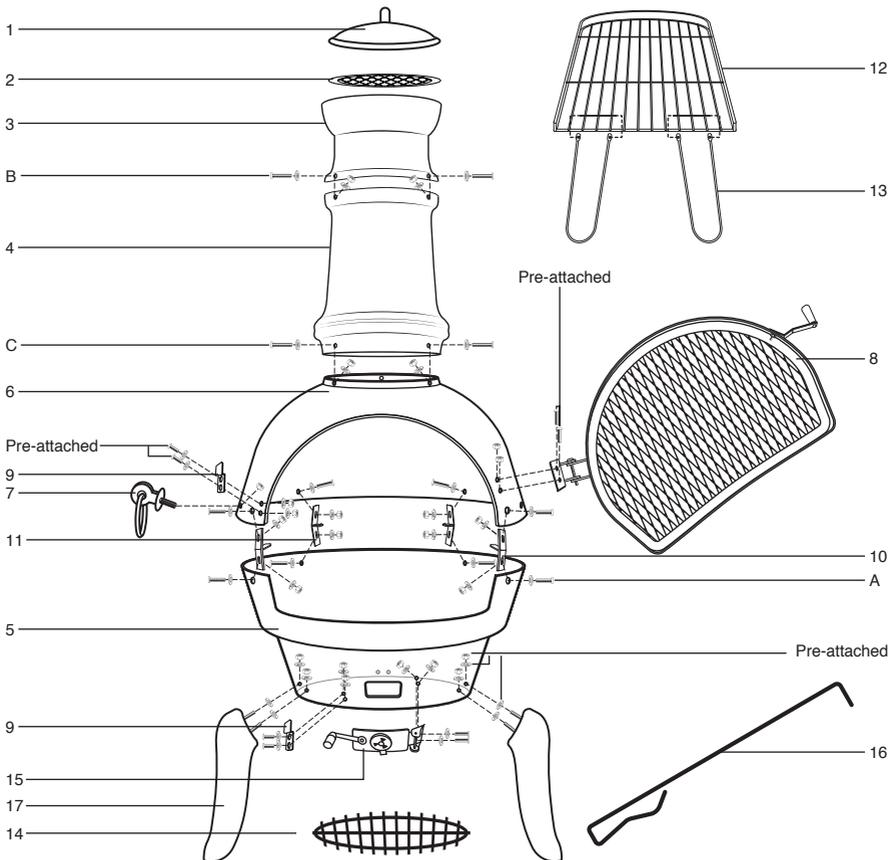

Assembly Instructions

IMPORTANT! - Remove any packaging before use, but retain the safety instructions and store them with this product.

- STEP 1 - Attach the 3x legs (17) to bottom bowl (5) by firstly removing the pre-attached washer, split washer and nut from each leg. Push the pre-attached bolts on the legs through the bottom bowl (5) and secure each leg with the previously pre-attached washer, split washer, and nut.
- STEP 2 - Stand on legs and align holes of top bowl (6) with holes in the bottom bowl (5). Attach bowls together with 2 x front brackets (10) and 2 x rear brackets (11) using 2 x bolts sets (A) per bracket. Make sure the brackets are positioned correctly as these are also used to support the grill. The long edge of the brackets should face towards the front of the chimenea.
- STEP 3 - Attach the top flue section (3) to the bottom flue section (4) using 3 x sets of bolts, washers and nuts (B).
- STEP 4 - Align the bolts holes on the bottom of the flue (4) with the holes in the top bowl (6) using three sets of bolts, washers and nuts (C).
- STEP 5 - Attach 1 x door latch (9) to the left side of the top bowl (6) and attach 1 x door latch (9) to the left of the vent hole in the bottom bowl (5) using pre-attached bolts and nuts.
- STEP 6 - Add flue grate (2) and rain lid (1) to the top of the flue (note rain lid to be removed when in use).
- STEP 7 - Attach 1 x handle (7) to either side of the top bowl (6) using pre-attached bolts, washers and nuts. Attach air vent (15) to bottom bowl (5) using pre-attached bolts, washers and nuts. Attach mesh door (8) to the right side of the top bowl (6) using pre-attached bolts and nuts.
Note: a little pressure on the door handle may be needed to locate this within the door latch. This secure fitting is to ensure the door can not accidentally be opened during use.
- STEP 8 - Place the log grate (14) into the base of the chimenea.
- STEP 9 - To use slide in grill (12), first attach grill handles (13) to the grill by locating the handle ends onto the bars at the front of the grill. The grill can now slide into the chimenea on the left and right brackets (10) and slotted over the rear brackets (11) to secure it.

The product is now ready to use but please ensure you have read these instructions thoroughly prior to use.