

Grey Series Adjustable Standing

User Instructions

69526



Tools required (not included)



Technical Information

Power supply: 220 - 240V ~ 50Hz
Power rating: 1000W/2000W
Ingress protection: IP24
Element type: Quartz
Life of lamp: Approximate maximum 5000 hours
Dimensions: H157-202cm x W50cm x D19cm
Net weight: 9.5kg



These instructions form part of this appliance. Please be sure to read them before use and keep for future reference. This product is for domestic use only and should not be used commercially or for contract purposes.

Produced in PRC for La Hacienda Ltd
Hangar 27, Site C, Aston Down Airfield, Nr Stroud, Glos, GL6 8HR, UK
www.lahacienda.co.uk

Care and safe use guidelines

IMPORTANT: THIS appliance incorporates an anti-tip cut-out switch so will ONLY operate in its fully assembled, upright orientation.

SAFETY INFORMATION

- The integral plug(s) of this appliance must not be cut off or modified for any purpose including: extending the cable length, wiring directly into an electrical spur, or modification of any type. Doing so may cause electrical safety or fire hazards and thereby invalidate the product warranty.
- Caution - some parts of this appliance can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- Do not use this heater in the immediate surroundings of a swimming pool, hot tub, pond or any vessel containing water.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance after it has been placed or installed in its intended normal operating position. Additionally, they shall have been given supervision or instruction concerning use of the appliance in a safe way, and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Ensure any person operating the heater has the capability to do so without risking injury to themselves or others. Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not move the unit when in use. Wait until the heater is completely cool before moving and check that it has been unplugged from the electrical socket.
- Never connect this appliance using a multi-way socket extender, plug expander or travel plug adaptor, etc.

POSITIONING THE APPLIANCE

- This appliance is designed and intended for outdoor use only.
- This appliance contains hot and arcing components inside. Do not use in areas where petrol, paint, explosive and/or flammable liquids are used or stored.
- This appliance must NOT be located:
 - immediately below an electrical socket outlet;
 - within close proximity (1m) of any combustible materials e.g. furniture, trees, leaves, dry grass and bushes, etc;
 - with the heating element facing upwards;
 - where the cable could cause a trip hazard.
- This appliance must be located:
 - with the heating element facing the users, for optimum benefit;
 - on a flat, level, surface, without rocking or instability; It incorporates an anti-tip cut-out switch and intermittent operation may occur if used on an unstable surface.
- If wall mounted; this appliance must be located at least 1.8m from the ground, and:
 - at least 0.5m away from a ceiling, or overhanging joists, etc;
 - mounted in a stable, horizontal orientation; It incorporates an anti-tip cut-out switch and intermittent operation may occur if not mounted correctly.

ELECTRICAL EXTENSION LEADS

- If it is necessary to use an extension lead to connect this appliance, be sure that it meets the following specification:
 - Tested and manufactured to BS EN 1363-2
 - Rated at 13A, 240 Volts, 3kW or higher
 - IP rated to IP54 or higher
 - Single socket extender only
- To protect against electric shock, it is recommended to connect a Residual Current Device (RCD) between the extension cable's plug and the wall mains socket.
- Ensure that the extension lead is fully unwound from its cable tidy or reel, before connecting any heating appliance.
- Never connect more than one extension lead in line with a heating appliance.
- Never use an extension lead in wet conditions, in rain or whilst using a hose pipe.

MAINTENANCE & STORAGE

- Switch off then unplug this appliance before cleaning.
- Clean only with a soft damp cloth, and mild detergent if necessary; allow to dry naturally before re-connecting the mains plug. Do not use any abrasive substance or cloth for cleaning as this could damage the surface of the appliance.
- Avoid touching the heating element as finger marks will cause its premature failure. Any inadvertent finger marks should be wiped off using a soft cloth and methylated spirit or isopropyl alcohol.
- This appliance contains no user-replaceable parts. Seek the services of a certified electrician to replace the bulb/element if necessary.
- Do not leave this appliance outdoors overnight or when not in use. Store in a clean, dry environment.

DISPOSAL



This symbol means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Please contact your local authority for further details of your nearest designated collection point.

Parts List

1 (1x)



2 (1x)




3 (1x)



4 (1x)



5 (1x)

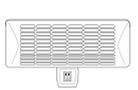

Standing parts list:

A (8x)



B (1x)



C (1x)



D (1x)



Wall mounted parts list:

E (4x)



F (4x)



G (2x)





H (1x)



H1 (1x)
(pre-attached to "H")

Prior to assembly, read the instructions carefully. Check all parts against this parts list. Carry out assembly on a soft surface to avoid scratching the paint. Please retain this information for future reference.

Assembly Diagrams

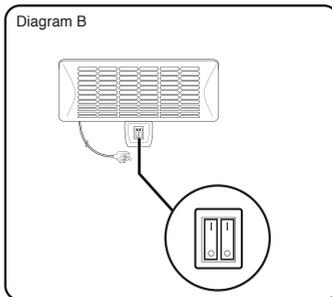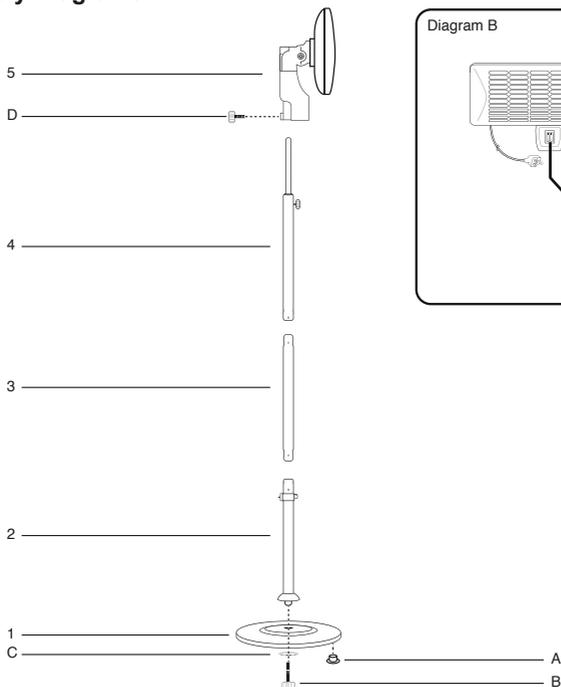

Assembly Instructions

IMPORTANT! - Remove any packaging before use, but retain the safety instructions and store them with this product.



- STEP 1 - Turn base (1) upside down onto a clean, soft surface and attach 8x rubber feet (A) around the outside rim to protect the floor and the product.
- STEP 2 - Turn base (1) onto its side and fix base pole section (2) to the base (1) with the large adjustable knob (B) and washer (C) ensuring the pre-attached screw cover is facing down. Turn base (1) right way up.
- STEP 3 - Remove 8x preattached bolts from the middle pole section (3) and slot middle pole section into base pole section (2). Attach using 4x remaining bolts.
- STEP 4 - Insert adjustable top pole section (4) into middle pole section (3) and attach using 4x remaining bolts.
- STEP 5 - Remove the preattached bolt from the neck of the heater head (5) and insert heater head (5) into top pole section (4). Replace pre-attached bolt with small adjustable knob (D) and secure.

The product is now ready to use but please ensure you have read these instructions thoroughly prior to use.

Operating The Appliance

- Before plugging the heater into a power supply, please first adjust the angle of the heater.
- You can change the angle of your heater by up to 25°. You can adjust this by moving the heater head (1) to your desired angle. Please only change the angle of your heater when it is NOT in use and it is completely cool.
- To operate, ensure the unit is plugged into the correct power supply.
- To control the heat output of the unit, use the switches as indicated in Diagram B on page 4. The unit is off when both switches are in the "O" position. Low power (1000W) is selected when either switch is in the "I" position. High power (2000W) is selected when both switches are in the "I" position.

Wall Mounted Assembly Diagram

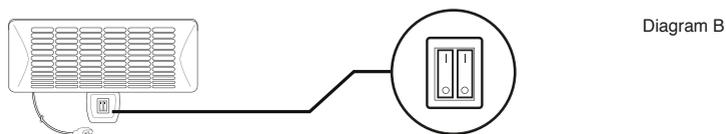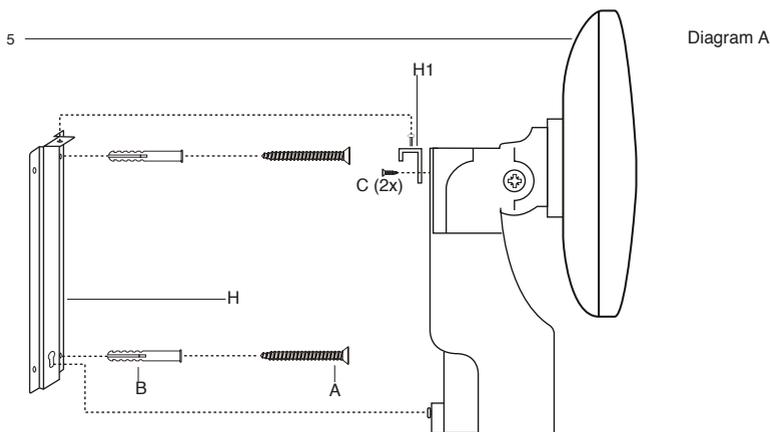

Wall Mounted Assembly Instructions

IMPORTANT! - Remove any packaging before use, but retain the safety instructions and store them with this product.

- STEP 1 - Detach the brace (H1) from the wall bracket (H) by removing the preattached screw.
- STEP 2 - Drill 4 holes into a suitably strong exterior wall by positioning the wall bracket (H) a minimum of 1.8M above the ground and then mark the hole positions using a pencil; ensure the holes are straight by using a spirit level (not included). Using a drill (not included), bore the holes in the positions you have marked.
- STEP 3 - Insert 4 x universal rawl plugs (F) into the drilled holes. Insert 4 x screws (E) into rawl plugs.
- STEP 4 - Attach the brace (H1) with 2 x screws (G) to the top of the neck of the heater.
- STEP 5 - Hang the heater (5) onto the wall bracket (H) by aligning the screw at the base of the neck of the heater with the hole in the bracket (H) and slot in place.
- STEP 6 - Replace the preattached screw through the top of the brace (H1) and tighten to secure.

The product is now ready to use but please ensure you have read these instructions thoroughly prior to use.